

Intelligent lock cylinder



Product manual

Part 1: Introduction to product parameters

Name: Smart lock cylinder
 Model: C001C
 Security level: top level
 Adapt to door type: security door, wooden door, glass door
 Adapt to the door thickness: 40mm----100mm
 Electrostatic protection: 15KV
 Power input: 3.6--5V
 Current: Operating current <135mA
 Standby current <10uA
 Working temperature: -20----70° C
 Resistance to pressure: 100,000 times

Part 2: product composition



Intelligent lock cylinder special tools mechanical magnetic key IC card

APP+ password+ ICcard + Emergency micro magnetic induction key
 MODEL : C001C

Smart lock instructions

1. Add a Bluetooth administrator

The administrator's door lock was not added, In the case where the backlight is off. Open the Lions housekeeper (TT LOCK) APP first. Click the + sign to add a lock. Select the appropriate lock. (If there is no lock available in the corresponding lock, please select the lock), According to the prompt, the user uses the button to wake up the door lock, click Next, select the corresponding lock in the nearby lock, click the + sign, then name the door lock, click Next, the Bluetooth administrator adds successfully. (Adding an administrator requires the phone to turn on Bluetooth and location information)

1,Set the administrator password

The user selects Settings – Administrator Unlock Password – Password – enters 4–9 digits on the App and then confirms that the administrator password has been successfully modified.

2, add IC card

After the user select the "Add IC Card" function on the App. The mobile app prompts "Please swipe". After the user swipes the card and recognizes it, it prompts "Enter Successfully".

3, password to open the door

wakes up, the user enters the correct door open password and presses key
 If the password verification is successful, the door lock displays a blue light and unlocks the lock.
 If the password has expired, the door lock displays a red light. Unlocking failed.
 If you enter the wrong password 5 times in a row. The system is locked and released after 5 minutes.

4, IC card to open the door

After the user swipe the card, if the IC card is recognized and is valid. The door lock displays a blue light and unlocks the lock.
 If it has expired or is not in effect. Then the door lock shows a red light. Unlocking failed
 If the IC card does not exist, the door lock displays a red light. Unlocking failed

5, Unlock

Part 3:Product Installation Instructions

<p>3.1 Remove the original lock cylinder</p> <p>1.Unscrew the old lock cylinder fixing screw with a tool. Remove the original mechanical lock cylinder (for upgrade), install the lock cylinder, front and rear panels,side panels (for new installation)</p>	
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

<p>3.2 Remove the Intelligent lock cylinder and knob</p> <p>1.Remove the intelligent lock cylinder and knob</p>	
------------------------------------------------------------------------------------------------------------------------	--

<p>3.3 Installing the Intelligent lock cylinder</p> <p>1.Install the intelligent lock cylinder into the front panel. Adjust the position according to the lock cylinder fixing screw.</p>	
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

<p>3.4. Install the lock</p> <p>1.Install the lock cylinder fixing screw</p>	
-------------------------------------------------------------------------------------	--

Part 3:Product Installation Instructions

<p>3.5 After Installing knob.</p> <p>1.Put back the knob;use a special tool to tighten the screws. 2.Use the back knob to test if the intelligent lock cylinder is installed correctly. Check if the knob is open normally.</p>	
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

<p>3.6 Installing the battery</p> <p>1. Take out the frontknob pressure plate.Remove the battery cover with a special tool. 2.Insert 3 "AAA" standard No:7 batteries in the battery compartment.Pay attention to the positive and negative directions of the battery. The spring end is the negative pole. 3.Install the battery cover. Tighten the battery cover screw.Replace the front acrylic plate.</p>	
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

<p>3.7 Test after installation is completed</p> <p>1.Check that the door lock is securely mounted on the door. Check the back knob can open the door normally. 2.After the power is connected,the motor is reversed.At this time, the knob is idling before turning.Enter the initial password can be opened normally.</p>	
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

<p>3.8 Use of emergency mechanical keys</p> <p>1.Take the front acrylic plate out. 2.Insert the corresponding mechanical key. And turn 30 degrees clockwise.When turning the key,the front knob cannot be rotated. 3.Turn the front knob to open the door</p>	
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--

This door lock will automatically close the lock 5 seconds after the lock is unlocked.

6, modify the user to open the password

Permanent, time-limited or custom passwords obtained by the user can be used (password needs to be unlocked once)

Digital panel input 10 original password new password new password The new password takes effect.

7, low electricity reminder

When the power is low, the user touches the button to wake up the door lock. A red light indicates "The battery is low. Please replace the battery" and the red light on the screen backlight flashes rapidly for 1 second.

8, keyboard lock

When the number of input password errors reaches 5 times. The lock prompt "Illegal operation, the system is locked". Lock the password keyboard for 5 minutes at the same time. The backlight flashes once. Indicates that the current keyboard is locked.
 While the keyboard is locked, the IC card and the

App can open the door normally, and the password keyboard will be unlocked after the door is opened.

9. Delete the Bluetooth administrator.

Method 1: The user finds the corresponding lock on the side of the door lock. Enters the corresponding lock setting, and deletes the administrator key.

